

METAL PLATE EMBOSSING SYSTEM



INSTALL GUIDE

Revision 2.02



Important: the technical information contained in this manual is property of MATICA System S.r.l. and is secured by copyright. The terms of the license define and specify permitted uses and other limitations.

Reproduction of any part of this manual, in any form, is forbidden without the explicit written permission of MATICA System S.r.l.

Technical information contained in the present manual is subject to change without notice. If not otherwise specified, any reference to companies, names, dates and addresses is purely incidental and is only intended to illustrate the use of the MATICA System S.r.l. product.

Every care has been taken in the collection and verification of the documentation inserted in this manual; nevertheless MATICA System S.r.l. cannot assume any responsibility deriving from its use.

Copyright © 2008 **MATICA System S.r.l.**
All rights reserved
Published by **MATICA System S.r.l.**

Printed in Italy
Issue: May 2008
Revision 2.02

MATICA System S.r.l.
via Guido Rossa, 4/6
20037 – Paderno Dugnano
MILAN - ITALY
Phone +39.02.92272501
Fax +39.02.91084372

E-mail: techsupport@maticacs.com
Web: <http://www.maticacs.com>

Table of contents

Paragraph 1 – MatiCard installation..... 4

Paragraph 2 – MatiCard configuration for C410..... 7

Paragraph 1 – MatICard installation

Before installing C410 you must install the MatICard software.
Go to the Matica User CD start page and click **Install MatICard Graphic**.




In the MatICard InstallShield Wizard window, click **Next**.




In the following wizard windows confirm the installation, accept the license terms and choose the installation folder, always clicking **Next**.


Note: in the license terms window are specified the operative systems required by the MatiCard software.

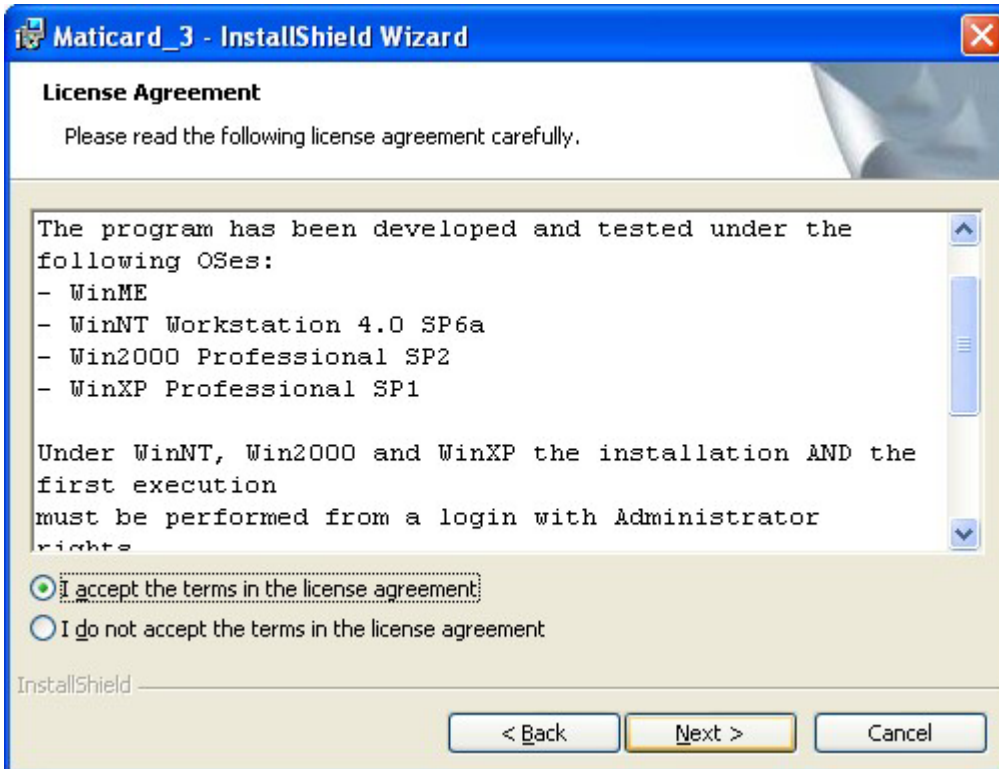

In the following wizard window click **Install** to start the installation.

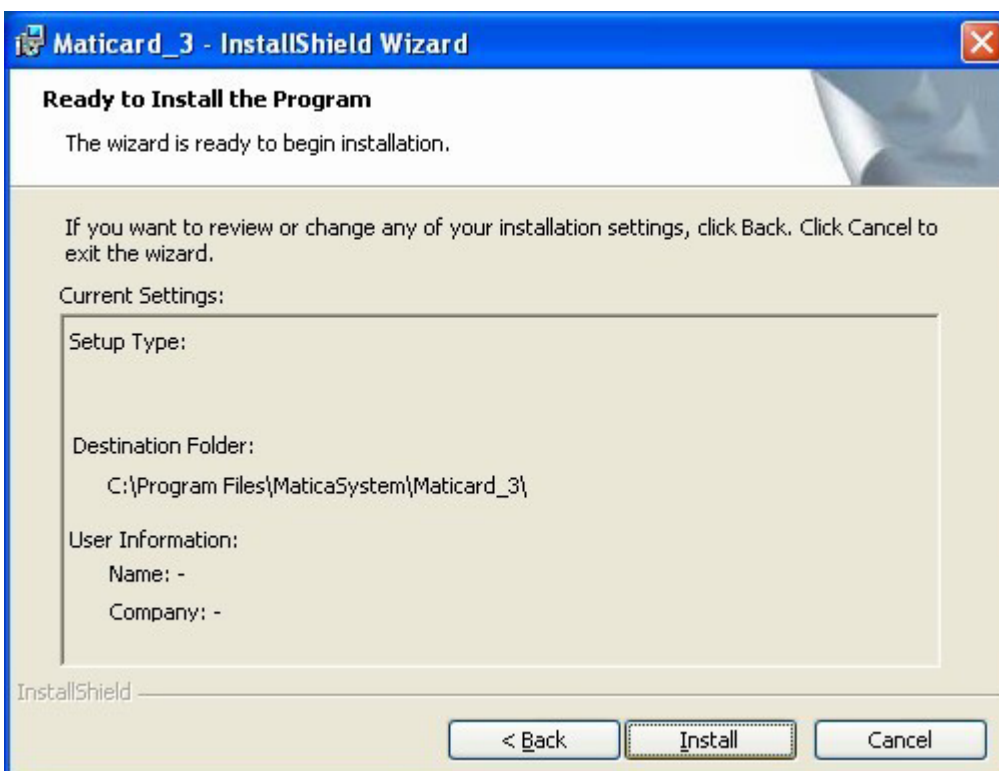


When the Pc has completed the installation, click **Finish**.

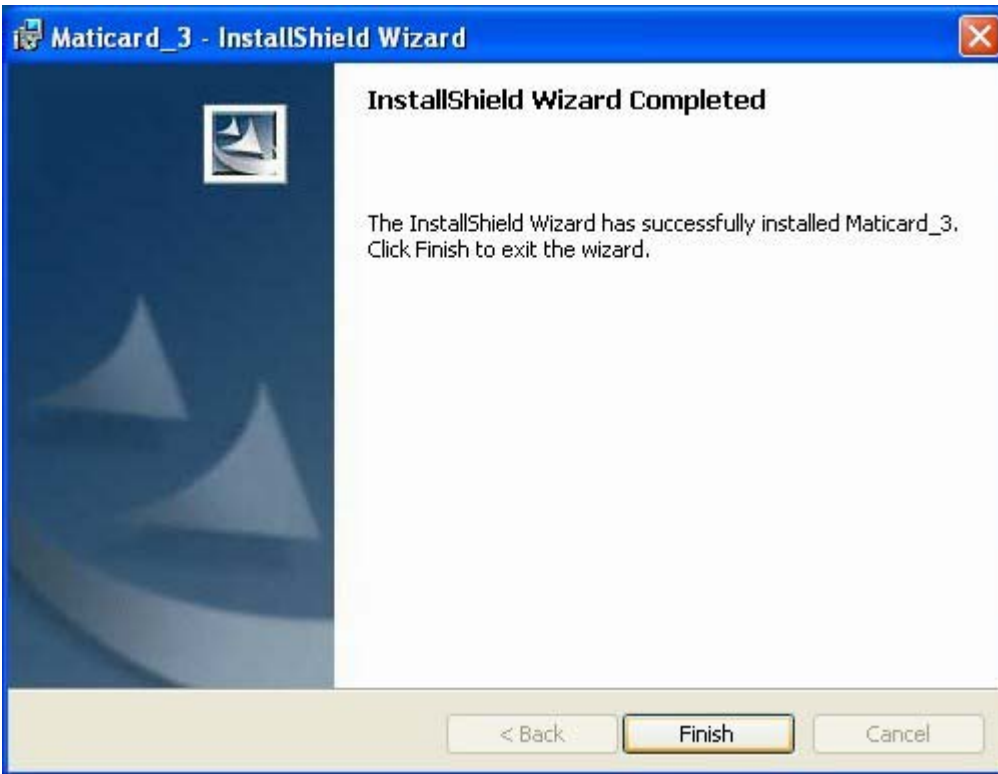

On the PC desktop, double click the MatiCard icon.



In the MatiCard reboot warning window, click **OK**.

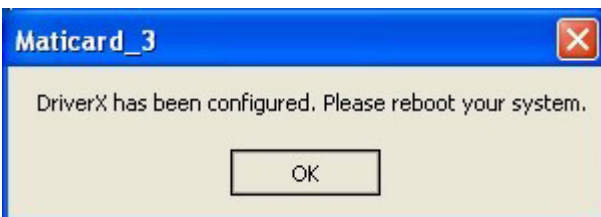

Restart the PC.


Paragraph 2 – MatiCard configuration for C410

To install for the C410 connect the serial cable and the power supply, then switch on the machine.


On the PC desktop, double click the MatiCard icon.




Into the MatiCard Graphic window, click the command **Preferences** from the **Options** menu.

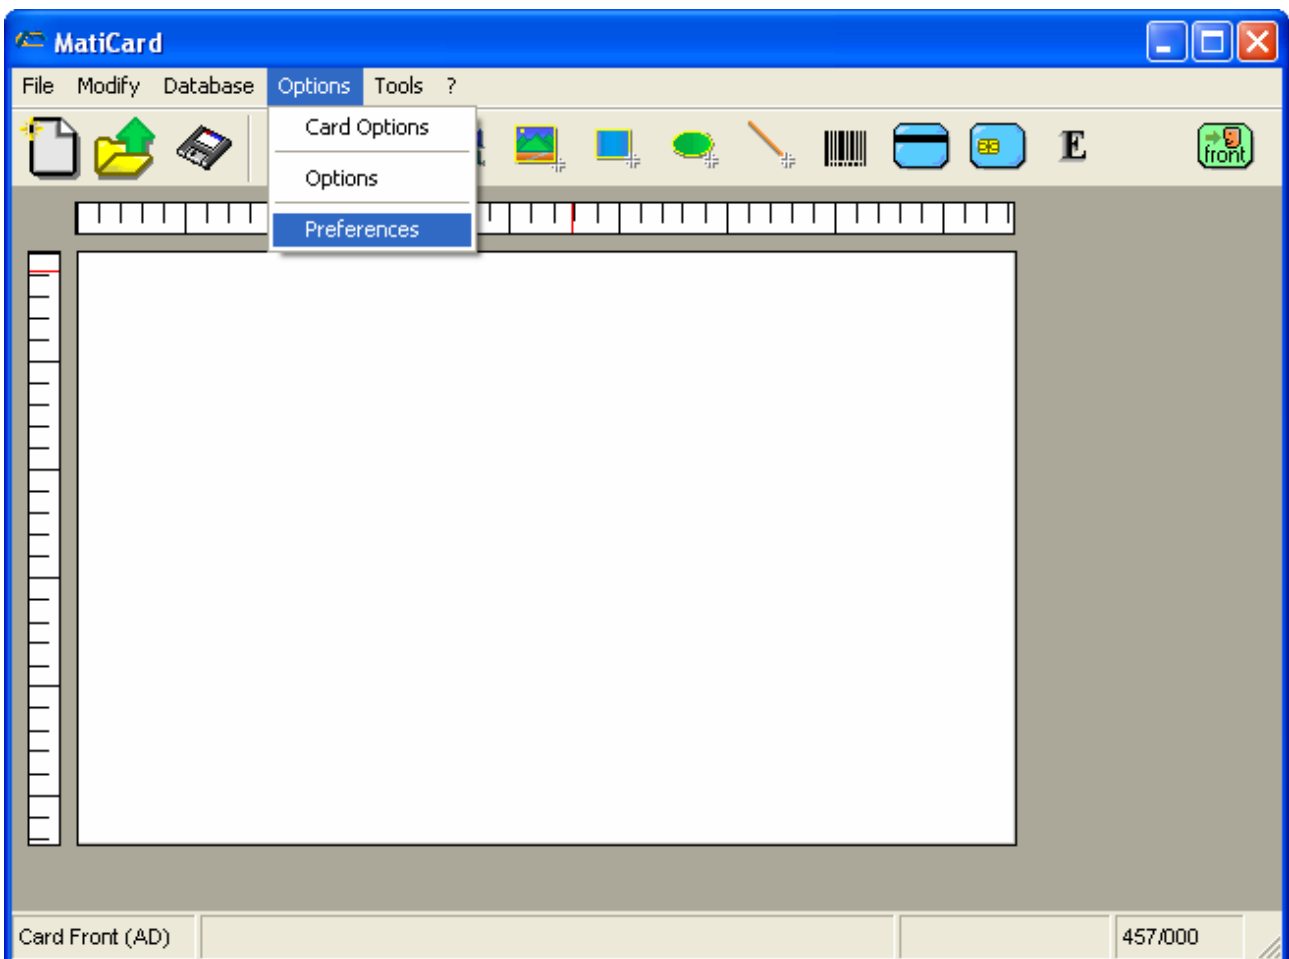

Into the Preferences window, select the Metal C410 option in the **Printer Type** box and then select the Serial Port used in the **Communication settings** box.

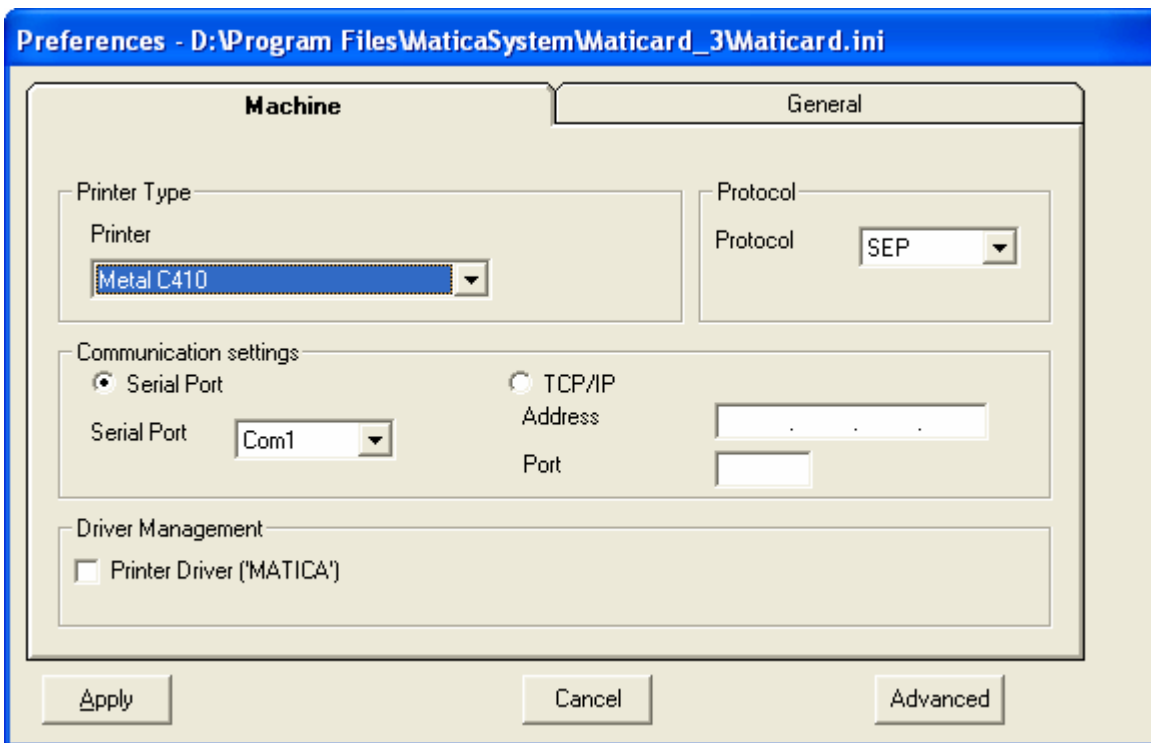

Now select the SEP option in the **Protocol** box.

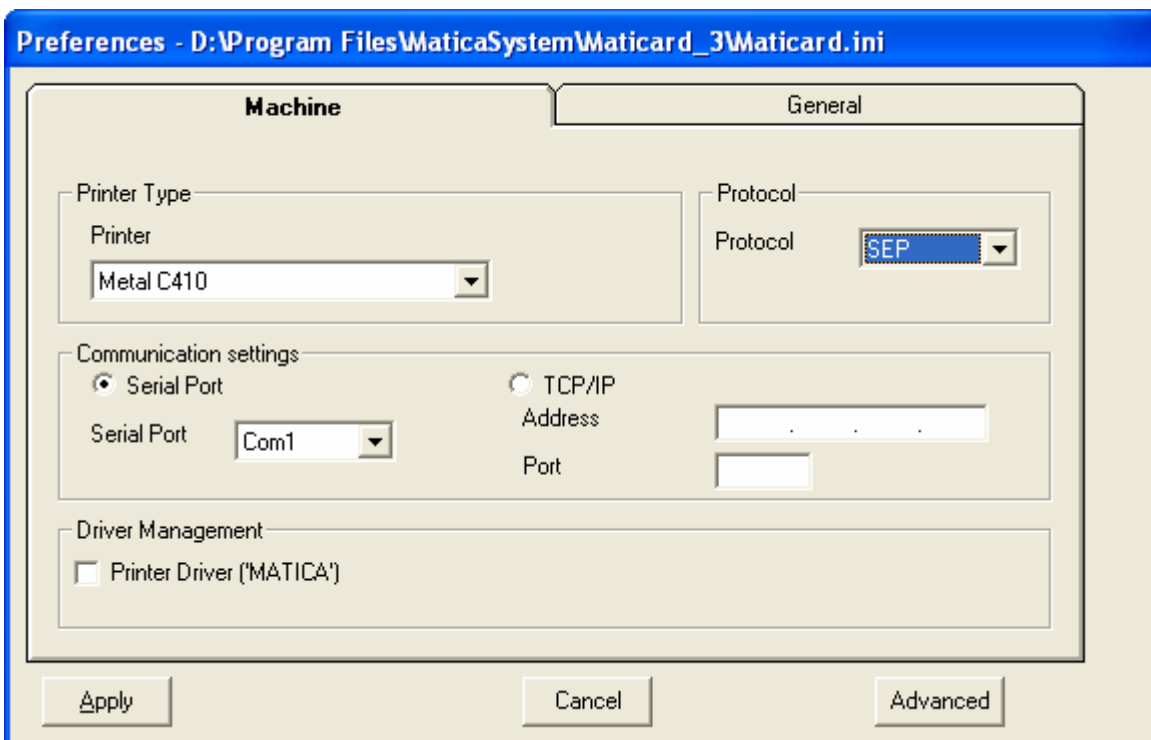

Finally, click **Apply** into the Preferences window to save the settings.